

Installation, User and Service Manual



AquaCyl Hot Water Cylinder

Storage Capacities 90, 125, 150, 170, 200, 250 & 300, Litres
Twin Coil, Storage Capacities
150, 200, 250 300, Litres

Important -This Manual should be left with the Cylinder after Installation

*Ferroli Limited, Lichfield Road, Branston Industrial Estate,
Burton-Upon-Trent, Staffordshire, DE14 3HD*

Tel. 08707 282 882, Fax. 08707 282 885

www.ferroli.co.uk

Ferroli AquaCyl, Direct, Indirect & Twin Coil Cylinder Range

Installation, User and Service Manual

Index

<u>Section</u>	<u>Page</u>
1 Introduction	2
2 Technical specifications	3
3 Check list	3
4 General requirements	4
5 Primary circuit installation	6
6 Secondary circuit installation	12
7 Discharge arrangement	14
8 Electrical Installation	17
9 Filling and commissioning	19
10 Servicing and maintenance	20
11 Fault finding	21
12 User instructions	22
13 Warranty	22
14 Installation, commissioning and service record	23

1. Introduction

The “**Ferroli AquaCyl**” is a high quality stainless steel hot water cylinder suitable for use on “unvented” or “open vented” hot water systems. The indirect heat exchange surfaces are designed to provide a rapid heat up. The indirect unit incorporates a 3kW electric immersion heater as a “backup” or for summer use. When the unit is supplied for unvented applications, it comes complete with all the necessary safety equipment to comply with legislation governing the installation of such systems. The temperature and pressure relief valve is factory fitted.

The “**Ferroli AquaCyl**” twin coil range has a second coil that can be used for fuel sources such as Solar, Biomass (wood burning stoves), range cookers and heat pumps.

All the installation, user and service instructions given for the “**Ferroli AquaCyl**” range also apply to the **AquaCyl Twin Coil**” range unless otherwise stated.

2. Technical specifications		Single Coil & Direct Cylinders						
Model Number	Ferrolì	90	125	150	170	200	250	300
AquaCyl								
Storage capacity (litres)		90	125	150	170	200	250	300
Overall diameter (mm)		520	520	520	520	520	520	520
Overall diameter incl. immersion heater mm		605	605	605	605	605	605	605
Overall height with exp. vessel on cold feed supply (mm) ¹		755	980	1105	1255	1455	1755	2065
Overall height with exp vessel on top (mm) ¹		1083	1308	1433	1583	1816	2167	2477
Weight when full (kg)		120	159	188	212	246	299	353
Primary flow/return connections (mm)		22	22	22	22	22	22	22
Secondary return		-	-	-	-	Yes	Yes	Yes
Cold feed/hot draw off connections (mm)		22	22	22	22	22	22	28
Maximum water supply pressure (bar)		12	12	12	12	12	12	12
System operating pressure (pre-set) (bar)		3	3	3	3	3	3	3
Expansion vessel charge pressure (bar)		3	3	3	3	3	3	3
Expansion relief valve set pressure (bar)		6	6	6	6	6	6	6
Temperature and pressure relief valve set:								
Lift pressure (bar)		7	7	7	7	7	7	7
Lift temperature (°C)		90	90	90	90	90	90	90
Maximum primary working pressure (bar)		3	3	3	3	3	3	3
Performance:								
Hot water generation time from 15 to 65 °C for 'Indirect' cylinder (min)		26	36	37	36	33	35	40
Hot water generation time from 15 to 65 °C for 'Direct' cylinder (min)		52	72	86	98	108	144	202
Regeneration time for 70% of Contents for 'Indirect' cylinder (min)		18	25	26	25	24	25	29
Regeneration time for 70% of Contents for 'Direct' cylinder (min)		27	37	45	51	63	75	136
3. Check list								
Cylinder assembly 90 litre		1	-	-	-	-	-	-
Cylinder assembly 125 litre		-	1	-	-	-	-	-
Cylinder assembly 150 litre		-	-	1	-	-	-	-
Cylinder assembly 170 litre		-	-	-	1	-	-	-
Cylinder assembly 200 litre		-	-	-	-	1	-	-
Cylinder assembly 250 litre		-	-	-	-	-	1	-
Cylinder assembly 300 litre		-	-	-	-	-	-	1
Expansion vessel 12 litre		1	1	1	1	1	-	-
Expansion vessel 19 litre		-	-	-	-	-	1	1
Pressure reducing valve		1	1	1	1	1	1	1
Expansion relief valve		1	1	1	1	1	1	1
T/P valve, pre fitted		1	1	1	1	1	1	1
15/22 Tundish		1	1	1	1	1	1	1
22mm motorised valve ²		1(0)	1(0)	1(0)	1(0)	1(0)	1(0)	1(0)
Control/limit thermostat ²		1(0)	1(0)	1(0)	1(0)	1(0)	1(0)	1(0)
Immersion heater pre fitted ²		1(1)	1(2)	1(2)	1(2)	1(2)	1(2)	2(2)

Note:

1. Expansion vessels can be fitted either on the cold water supply or on top of the cylinder.
2. Direct cylinder quantities shown in brackets.

2B. Technical specifications		Twin Coil Cylinders			
Model Number	Ferroli	150 TC	200 TC	250 TC	300 TC
AquaCyl					
Storage capacity (litres)		150	200	250	300
Overall diameter (mm)		520	520	520	520
Overall diameter incl. immersion heater mm		605	605	605	605
Overall height with exp. vessel on cold feed supply (mm) ¹		1105	1455	1755	2065
Overall height with exp vessel on top (mm) ¹		1433	1816	2167	2477
Weight when full (kg)		188	249	299	356
Primary flow/return connections (mm)		22	22	22	22
Dual fuel coil flow/return connections (mm)		22	22	22	22
Secondary return connection		-	Yes	Yes	Yes
Cold feed/hot draw off connections (mm)		22	22	22	28
Maximum water supply pressure (bar)		12	12	12	12
System operating pressure (pre-set) (bar)		3	3	3	3
Expansion vessel charge pressure (bar)		3	3	3	3
Expansion relief valve set pressure (bar)		6	6	6	6
Temperature and pressure relief valve set:					
Lift pressure (bar)		7	7	7	7
Lift temperature (°C)		90	90	90	90
Maximum primary working pressure (bar)		3	3	3	3
Maximum lower primary working pressure (bar)		3	3	3	3
Performance:					
Hot water generation time from 15 to 65 °C for 'Indirect' cylinder (min)		37	-	35	-
Hot water generation time from 15 to 65 °C for 'Direct' cylinder (min)		86	-	144	-
Regeneration time for 70% of Contents for 'Indirect' cylinder (min)		26	-	25	-
Regeneration time for 70% of Contents for 'Direct' cylinder (min)		45	-	75	-
3. Check list					
Cylinder assembly 150 ltr		1			
Cylinder assembly 200 ltr		-	1	-	-
Cylinder assembly 250 ltr		-	-	1	-
Cylinder assembly 300 ltr		-	-	-	1
Expansion vessel 12 ltr - 150 Ltr & 200 Ltr		1	1	-	-
Expansion vessel 19 ltr - 250 Ltr & 300 Ltr		-	-	1	1
Pressure reducing valve		1	1	1	1
Expansion relief valve		1	1	1	1
T/P valve, pre fitted		1	1	1	1
15/22 Tundish		1	1	1	1
22mm motorised valve ²		2	2	2	2
Control/limit thermostat ²		1	1	1	1
Immersion heater		1	1	1	1

Note:

1. Expansion vessels can be fitted either on the cold water supply or on top of the cylinder.

4. General requirements

4.1. The “**Ferroli AquaCyl**”, domestic hot water cylinder **MUST** be installed by a competent person in accordance with section **G3** of the current **Building Regulations**.

4.2. Important - It is important that the installer reads and understands these instructions, unpacks and familiarises themselves with the equipment before commencing the installation. Failure to observe these installation instructions could invalidate the warranty.

4.3. Water supply - The warranty requires that the water to be heated is of drinking water quality and that if water treatment equipment is installed, it must function correctly.

Where possible the unit should be fed via a Ø22mm supply pipe. It requires a supply pressure of 1.5 bar with a flow rate of at least 20 litres per minute as a minimum for it to function. Even with these rates, flow from the outlets will be disappointing if several outlets are used simultaneously. Generally speaking, the higher the supply pressure, the better the system will function. The cylinder control equipment is factory set to limit the system operating pressure to 3 bar. The maximum supply pressure into the pressure-reducing valve is 12 bar.

4.4. Taps and fittings - All taps and fittings incorporated in the unvented system should have a rated operating pressure of 7 bar or above.

4.5. Location - The unit is designed to be floor standing, vertically mounted, indoors, in a frost-free environment. When choosing a suitable location for the cylinder, consideration should be given to the routing of the discharge pipe to a convenient point and also the availability of an adequate power supply for connecting the immersion heater(s).

The cylinder may stand on any flat and level surface without any special foundation preparations, provided that it is sufficiently robust to support the full weight of the cylinder. (Refer to Technical specifications for weights).

The position of the cylinder should be such that easy access is provided for servicing the controls and replacing the immersion heater should the need arise.


Generally, pipe runs should be made as short as possible and lagged to prevent heat loss.

4.6. Storage and handling - If the cylinder is not being installed immediately, it should remain in its carton with all pipe end protective caps in situ to prevent damage. We recommend that the cylinder be transported to its installation position on a sack truck or similar with the outer carton in place.

4.7. Pipe work connections - All Pipe work connections to the cylinder **MUST** be made in accordance with Fig 1.1 or Fig 1.2.

4.8 Ferroli AquaCyl pipe work connections.

Fig 1.1

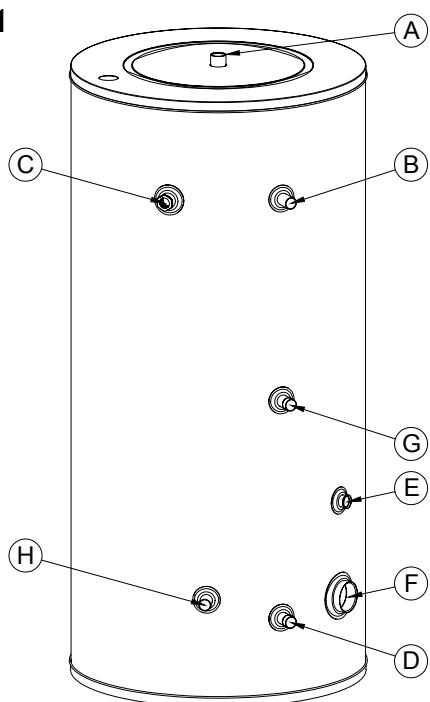


KEY

ITEM	DESCRIPTION
A	EXPANSION VESSEL (OPTIONAL)
B	HOT WATER OUTLET
C	TEMPERATURE AND PRESSURE RELIEF VALVE
D	HEATING WATER RETURN
E	THERMOSTAT POCKET
F	IMMERSION HEATER
G	HEATING WATER FLOW
H	COLD WATER INLET

4.9 Ferroli AquaCyl Twin Coil pipe work connections.

Fig 1.2

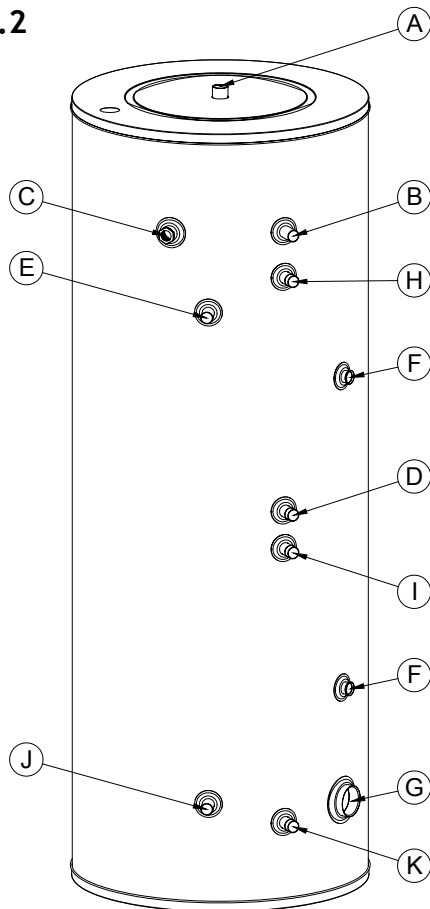

KEY

ITEM	DESCRIPTION
A	EXPANSION VESSEL (OPTIONAL)
B	HOT WATER OUTLET: 150L = Ø22mm 200L, 250L & 300L = Ø1½"
C	TEMPERATURE AND PRESSURE RELIEF VALVE
D	HEATING WATER RETURN
E	SECONDARY RETURN: 150L = Ø22mm 200L, 250L & 300L = Ø1½"
F	THERMOSTAT POCKET
G	IMMERSION HEATER
H	HEATING WATER FLOW
I	SOLAR COIL FLOW
J	COLD WATER INLET: 150L, 200L & 250L = Ø22mm 300L = Ø28MM
K	SOLAR COIL RETURN

5. Primary circuit installation

5.1. “Ferroli AquaCyl” and “Ferroli AquaCyl Twin Coil” cylinders are suitable for connecting to most fully pumped domestic gas or oil fired central heating boilers working on an open vented or sealed system having a maximum working pressure of 3 bar and a maximum working temperature of 90 degrees centigrade. **If you are in any doubt concerning the suitability of the boiler, consult the boiler manufacturer.** Solid fuel or wood burning boilers, and gravity circulation systems **MUST NOT** be used on the primary circuit of an unvented hot water system.

5.2. Systems - For the best results we recommend that the “Ferroli AquaCyl” cylinder be connected to a “W” plan type system that gives priority to domestic hot water (DHW) production. (See Fig 2) This particular system allows all the boiler’s energy to go into satisfying the hot water demand before switching over on to central heating duty.

If an existing system is a “flow share” arrangement such as a “S” or “Y” plan type system, (see Figs 3, 4.1 and 4.2) they will also provide satisfactory results, but during central heating demands, hot water production will not be as responsive.

Ferroli AquaCyl Twin Coil CYLINDERS MUST BE USED ON “S” PLAN SYSTEMS ONLY. This cylinder incorporates a second coil, situated below the boiler or upper primary coil. The upper primary coil connections should be made in accordance with the instructions given at the beginning of this section. **PLEASE ENSURE THAT YOU CONNECT THE PRIMARY ENERGY SOURCE, NORMALLY A GAS BOILER, TO THE UPPER COIL ONLY.**

The lower primary coil is used for energy input from a secondary source (examples include solar arrays, heat pumps, solid fuel boilers, range style cookers etc) having a maximum working pressure of 3 bar and a maximum working temperature of 90 degrees centigrade. The lower coil has it's own temperature sensing point - this is a stainless steel pocket. In addition there is a further sensing pocket should overall control of the cylinder temperature be required. Thermostats for these sensing points are not supplied.

The flow from the secondary energy source should be connected to the top connection on the lower coil and the return to the bottom. The motorised valve must be connected to the high limit on the cylinder thermostat in such a way as to isolate the cylinder from the secondary energy source if the cylinder temperature exceeds the high set point. *Please see the section on electrical installation.* **THIS IS ESSENTIAL TO ENSURE A SAFE WORKING PRODUCT & TO AVOID EXCESSIVELY HOT WATER. CORRECT WIRING OF THE THERMAL CUTOUT MUST BE ENSURED.**

5.3. Connections - The primary flow and return connections should be made in accordance with Fig 1.1 or Fig 1.2 using 22mm compression fittings, (not supplied). Note, that connections for the boiler are shown with the return above the flow, however, you can also connect the flow above the return.

The use of any PUSH FIT type connection to stainless steel tails provided for water connection to cylinders **SHOULD NOT BE USED**. Due to the gripper rings provided in this type of fitting being stainless steel, Ferroli has experienced failures during stringent testing of their product and will not accept liability for claims due to failure of this type of fitting. We advise in all situations that compression fittings are to be used for connections to cylinder tails provide on our product.

5.4. The 2 port valve - To prevent gravity circulation when the boiler switches off the 2 port motorised valve supplied with the unvented hot water kit **MUST** be fitted in the primary flow pipe to the cylinder and wired in accordance with Figs 2,3, 4.1 or 4.2 (depending on system design) to comply with current legislation.

5.5. Hard water areas - If the cylinder is to be used in a hard water area, we recommend that the primary flow temperature be limited to 75 degrees centigrade. This will help reduce the migration of suspended solids in the water and help prevent the build up of lime scale.

“W” Plan wiring layout and system schematic.


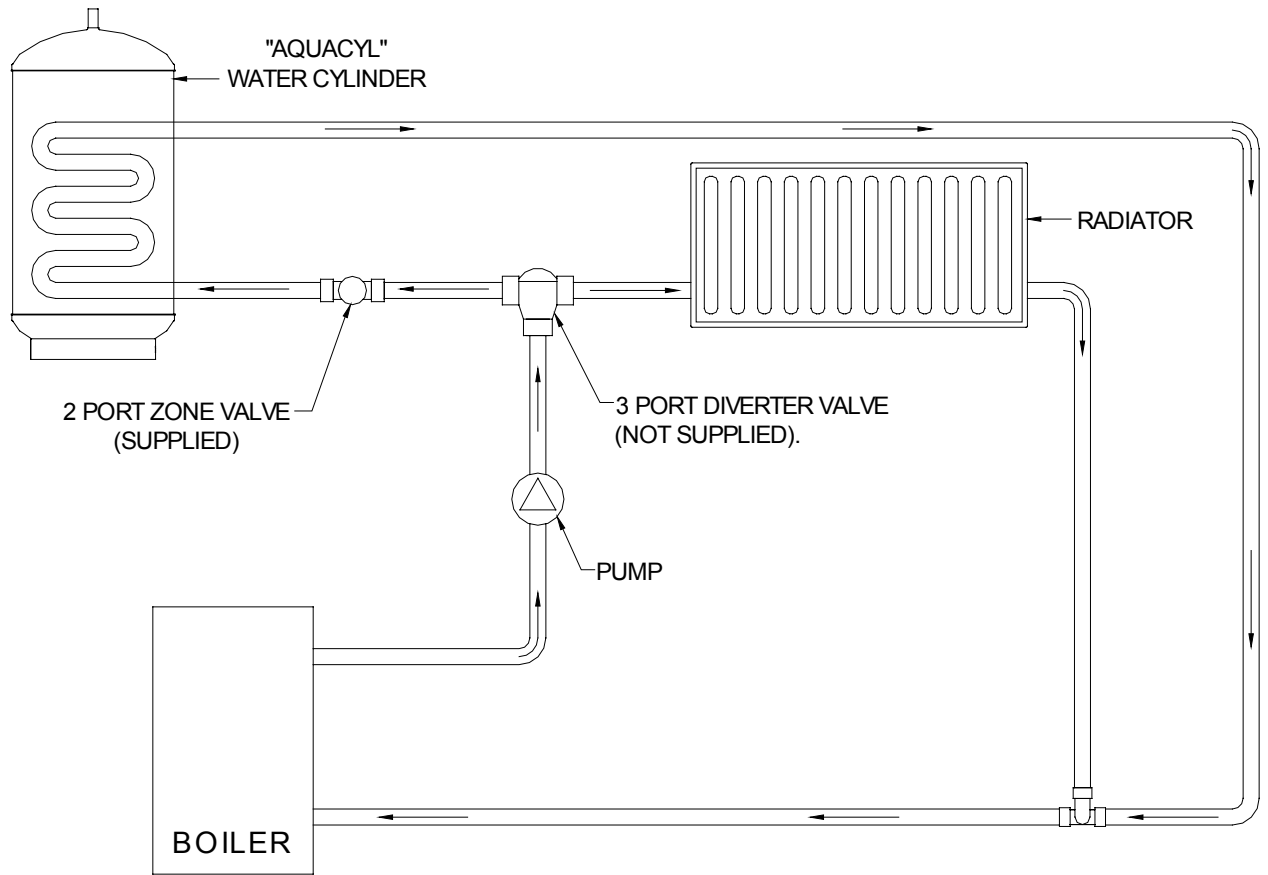


Fig 2

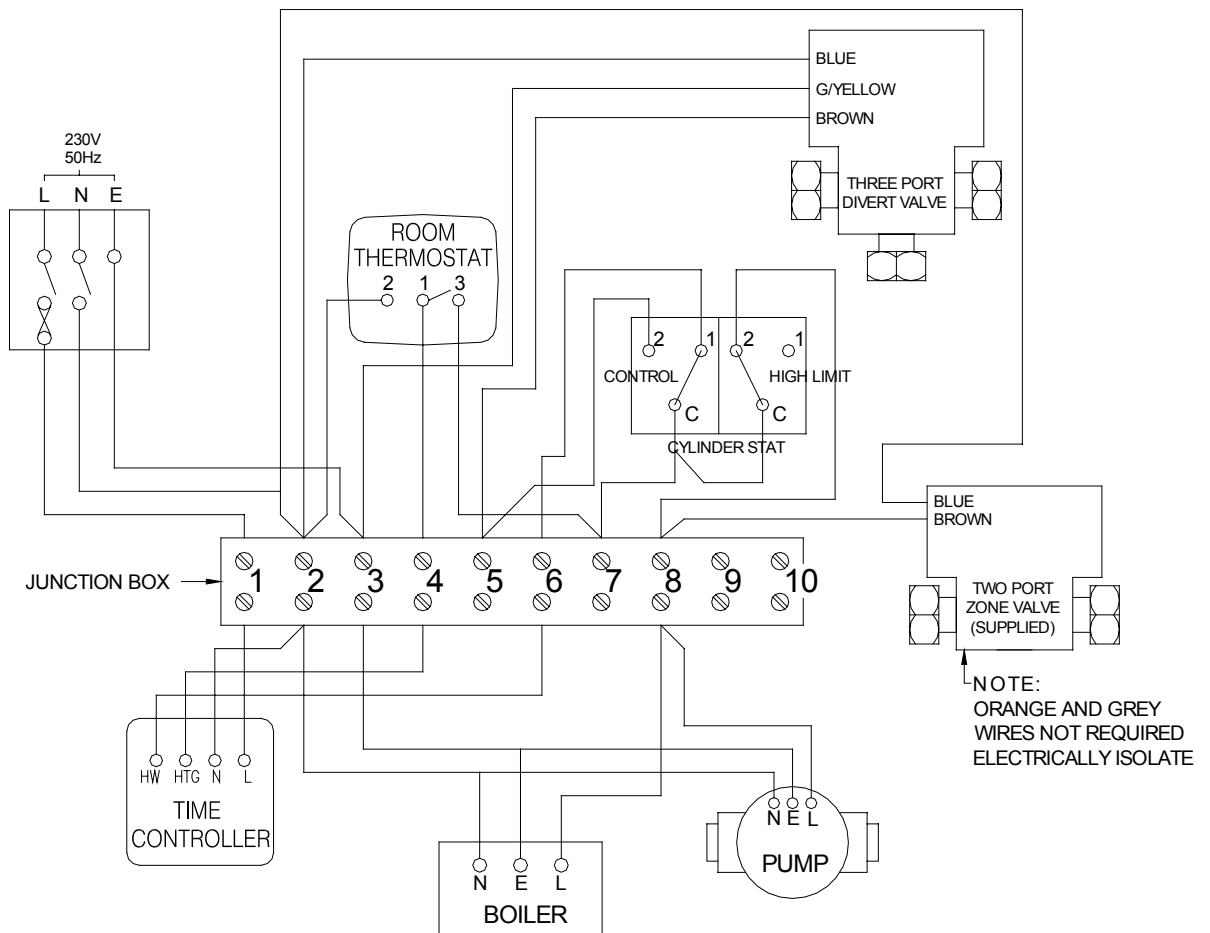

“Y” Plan wiring layout and system schematic.


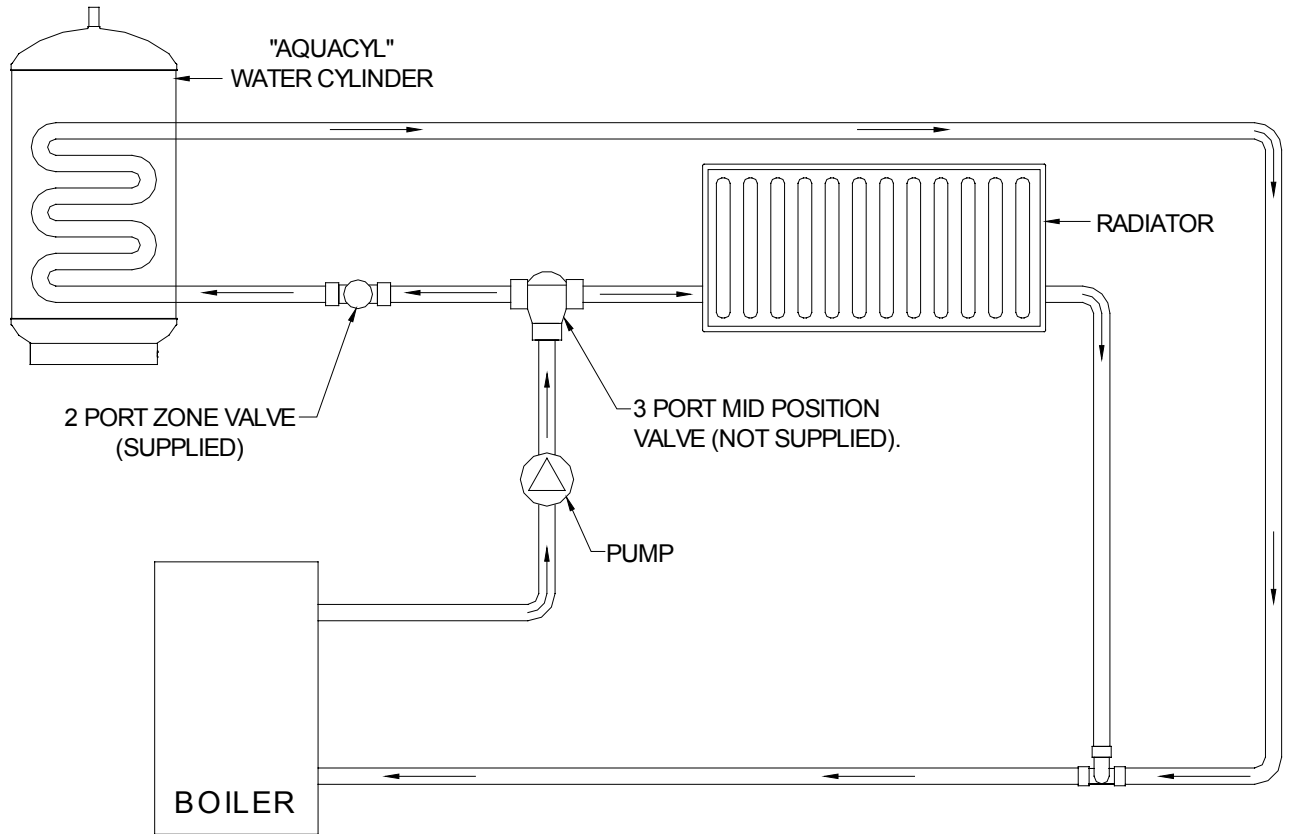


Fig.3

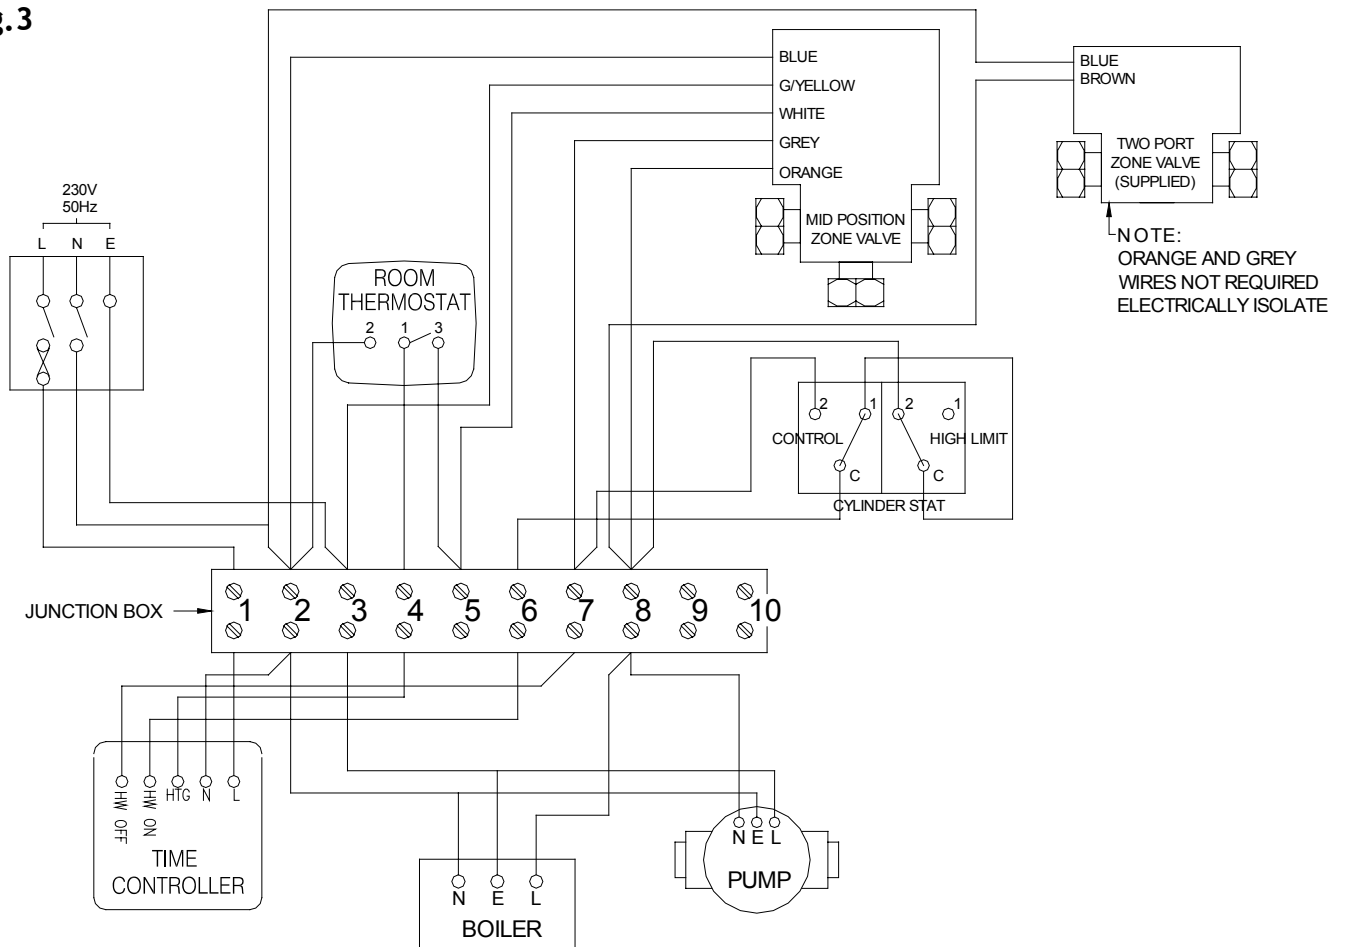

“S” Plan wiring layout and system schematic.


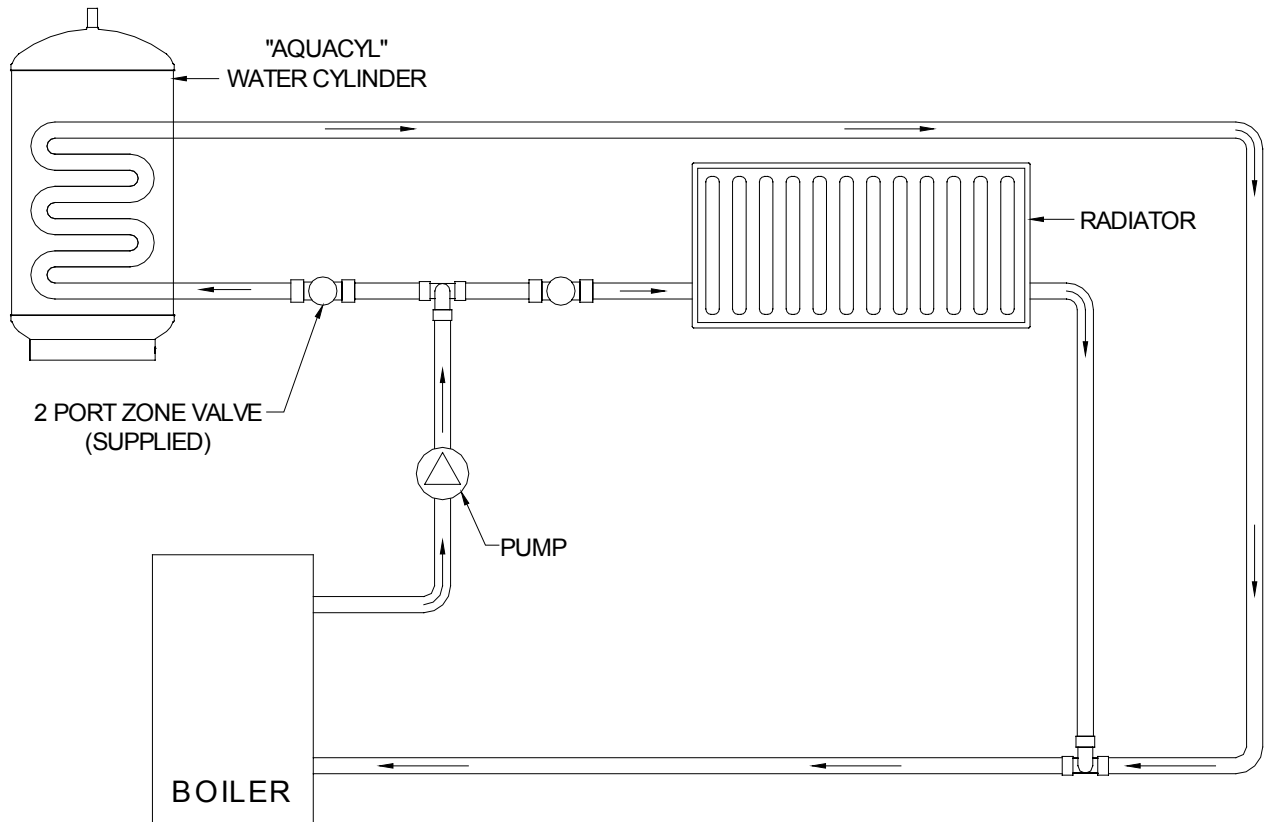


Fig.4.1

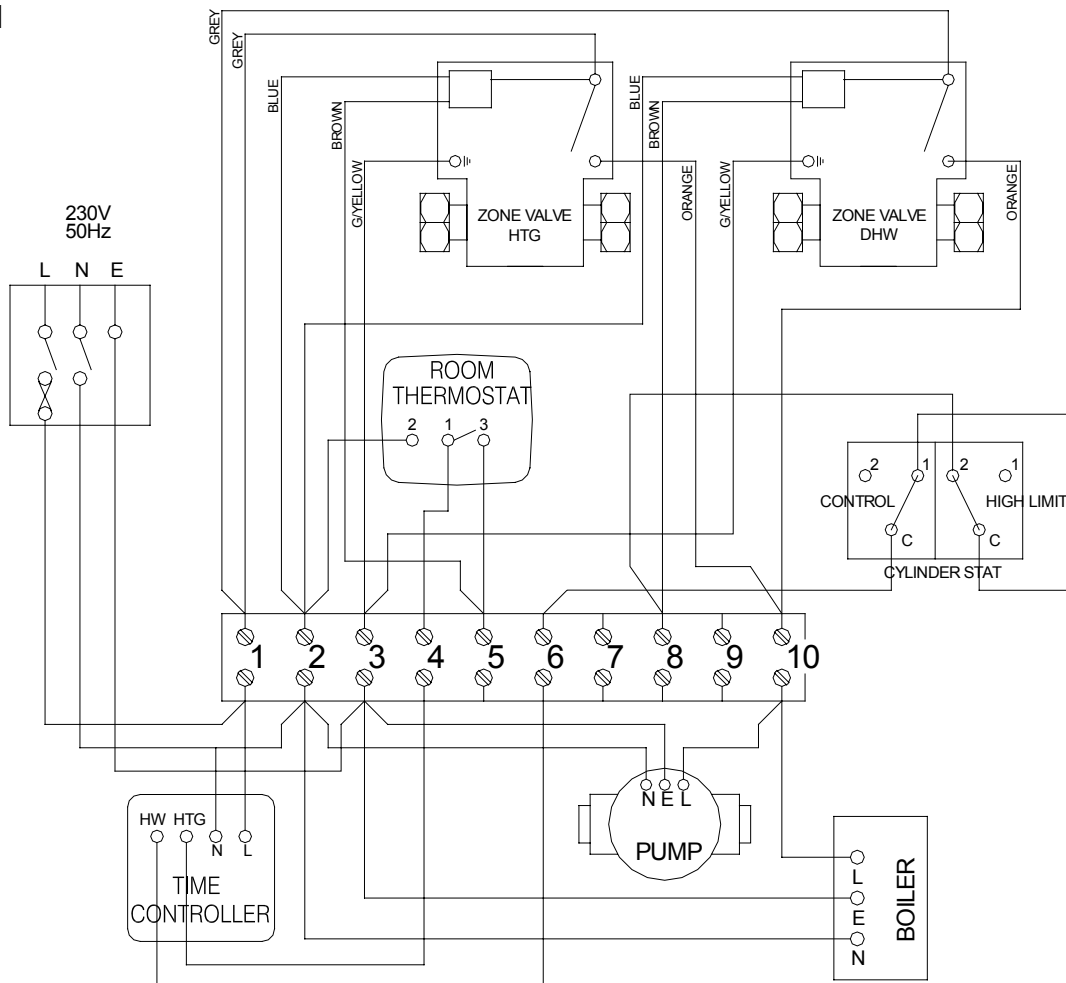

“S” Plan wiring layout and system schematic for “Ferroli AquaCyl Twin Coil”.


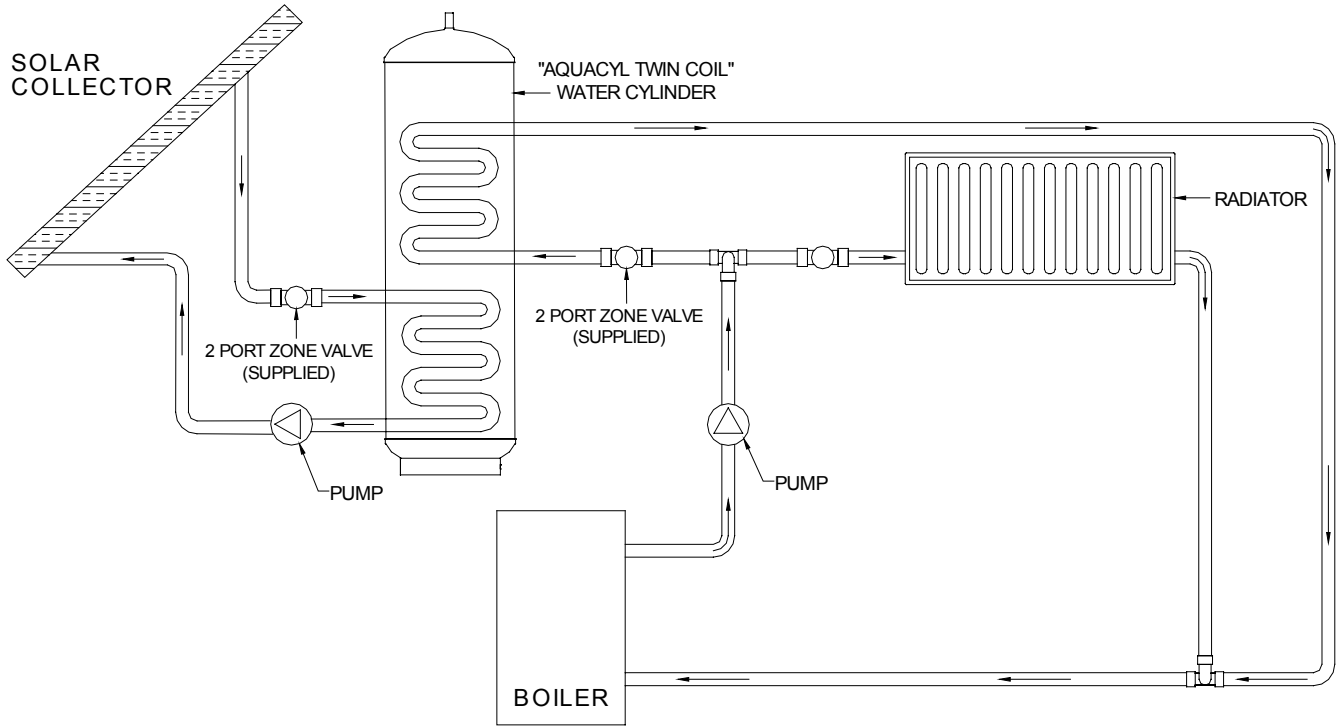


Fig.4.2

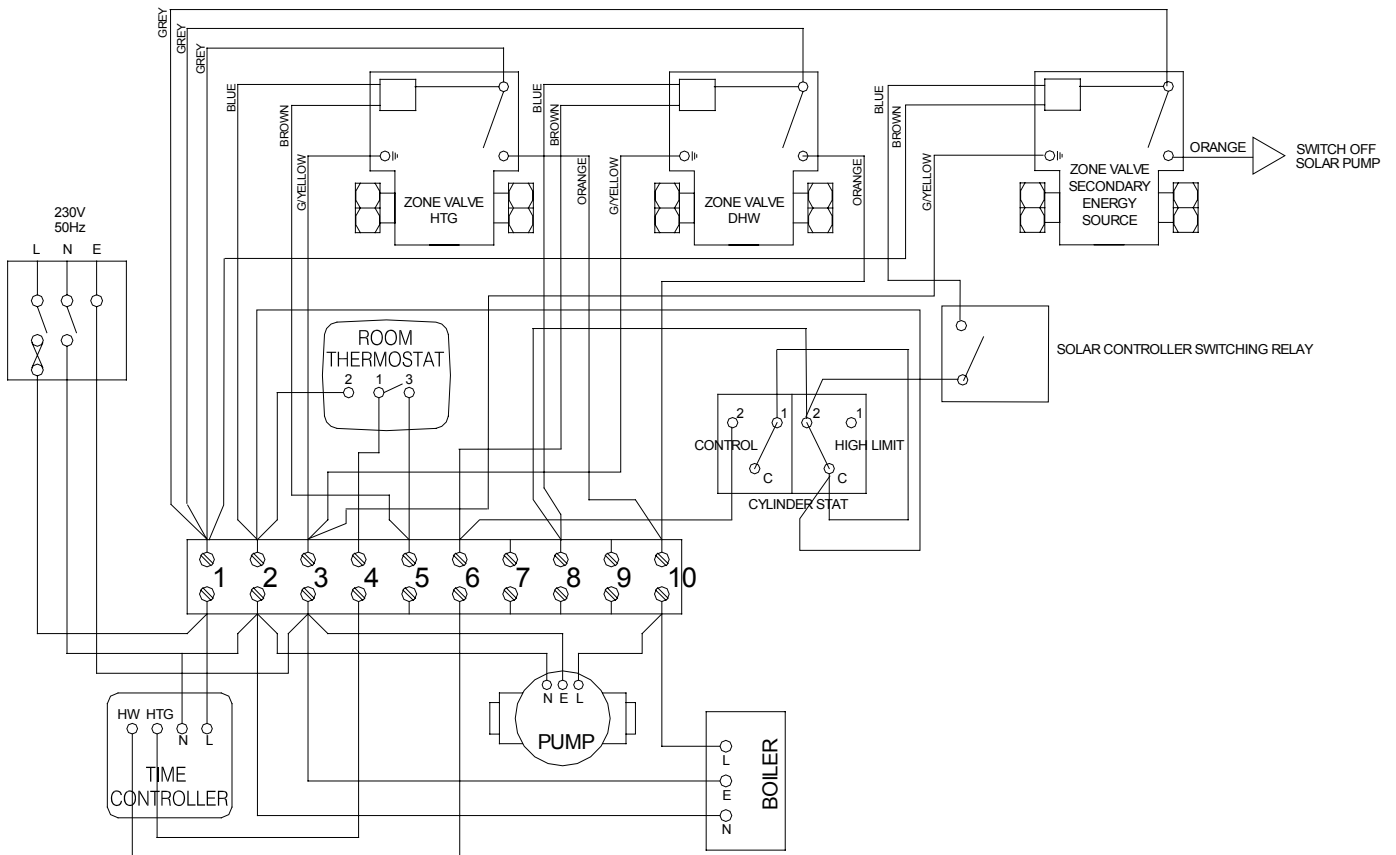

6. Secondary circuit installation.

6.1. Connections. Secondary circuit connections **MUST** be made to the cylinder in accordance with Fig 1.1, Fig 1.2 and Fig 5. A drain cock (not supplied) should be fitted in the position shown in Fig 5 to facilitate draining of the cylinder.

6.2. Cold water supply - Where possible, for best results, the cylinder should be fed by an uninterrupted 22mm supply pipe into the pressure reducing valve (PRV) with a supply pressure of between 3 and 12 bar maximum. In the UK supply pressures this high are not always available. However the system will still work satisfactorily with pressures below this. The cylinder should not be used on any system with a supply pressure below 1.5 bar and a flow rate of less than 20 litres per minute.

6.3. Temperature and pressure relief valve - The temperature and pressure relief valve (TPV) is supplied factory fitted to the cylinder. The TPV must not be removed from the cylinder or tampered with in any way. The valve is pre calibrated to lift at 7 bar or 90 degrees centigrade and any attempt to adjust it will invalidate the warranty.

6.4. Expansion vessel - A suitable expansion vessel with a pre-charge pressure of 3 bar is supplied for fitting to all cylinders. For cylinders up to and including 200 litres capacity the supplied expansion vessel can be screwed on top of the unit or connected into the cold water supply. For cylinders of 250 and 300 litres capacity the supplied expansion vessel **MUST** be connected into the cold water supply. If the expansion vessel is connected into the cold water supply, it **MUST** be fitted between the expansion relief valve and the cylinder. The expansion vessel **MUST** be positioned with the entry point at the bottom.

IMPORTANT: Regular checks must be carried out to ensure that the expansion vessel is correctly pressurised to 3 bar at all times.

6.5. Pressure reducing valve - Taking due account of the directional arrow, fit the pressure reducing valve (PRV) in accordance with Fig 5. This can be connected to a supply pressure of between 1.5 and 12 bar maximum.

6.6. Expansion relief valve - Fit the expansion relief valve (ERV) in accordance with Fig 5. This valve has been pre-set to lift at 6 bar. No other valve should be fitted between the expansion relief valve and the cylinder.

6.7. Check valve - Taking due account of the directional arrow, fit the check valve (CV) in accordance with Fig 5.

6.8. Secondary circulation - If the “Ferroli AquaCyl” cylinder installation requires a secondary circulation circuit, a 15mm return leg, which incorporates a check valve should be connected via the cold feed using a 22 x 22 x 15 swept tee (see Fig 5).


However, the “Twin Coil” cylinder provides a secondary return connection to which a secondary circulation circuit, 15mm leg incorporating a check valve, should be connected (see Fig 1.2 for position of secondary return).

IMPORTANT: If a secondary circulation circuit is installed then a larger expansion vessel may be required to handle the increase in volume.

6.9. Tundish – The tundish must not be positioned above or in close proximity of any electrical current carrying devices or wiring.

Secondary circuit arrangement for Ferroli AquaCyl Cylinder

Fig 5

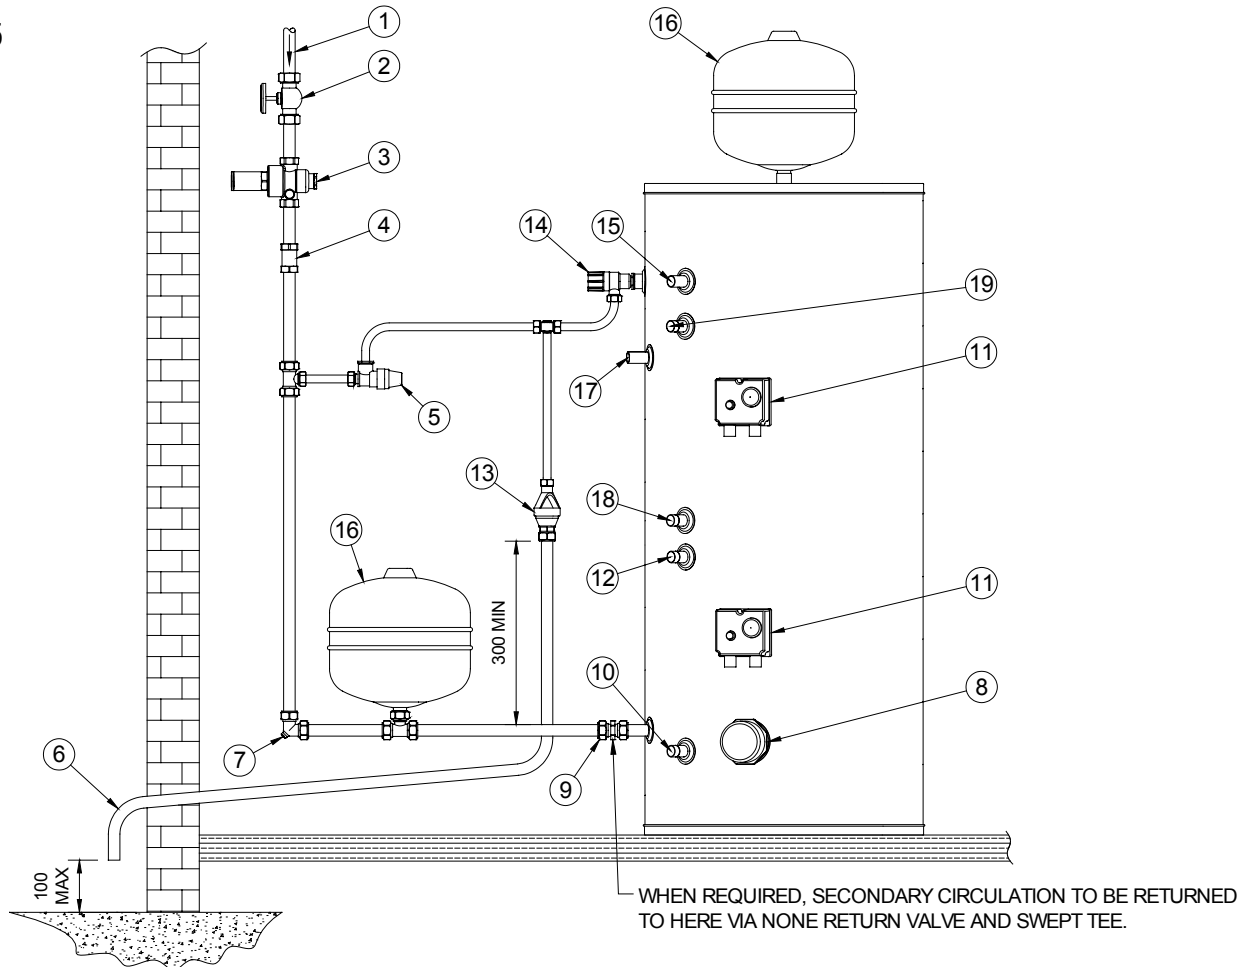

Items 3, 4 and 5 may be supplied as a composite group, incorporating the balanced take off point. A check valve should be inserted into all B.T.O. supply lines.

ITEM	DESCRIPTION
1	MAINS COLD WATER SUPPLY
2	STOP COCK (NOT SUPPLIED)
3	PRESSURE REDUCING VALVE - SET 3 BAR
4	CHECK VALVE
5	EXPANSION RELIEF VALVE SET AT 6 BAR
6	DISCHARGE PIPE Ø22mm (SEE SECTION 7)
7	DRAIN COCK
8	IMMERSION HEATER 230v - 3Kw - 50Hz
9	COLD WATER INLET Ø22mm EXCEPT 300L = Ø28mm
10	SOLAR COIL RETURN (TWIN COIL ONLY)
11	THERMOSTAT POCKET (1OFF SINGLE COIL, 2OFF TWIN COIL)
12	SOLAR COIL FLOW (TWIN COIL ONLY)
13	TUNDISH 15 TO 22mm
14	TEMPERATURE AND PRESSURE RELIEF VALVE SET AT 7 BAR & 90°C
15	HOT WATER OUTLET: ALL MODELS Ø22mm EXCEPT 200L, 250L & 300L TWIN COIL = Ø1½"
16	EXPANSION VESSEL - EITHER ON THE COLD WATER SUPPLY OR ON TOP OF THE UNIT
17	SECONDARY RETURN: INDIRECT Ø22mm - 200L, 250L & 300L ONLY TWIN COIL 150L = Ø22mm 200L, 250L & 300L = Ø1½"
18	HEATING WATER RETURN
19	HEATING WATER FLOW

7. Discharge arrangement.

Tundishes must be installed in a position so that they are clearly visible by the user. In addition, the discharge pipe from the Tundish should terminate in a safe place where there is no risk to persons in the vicinity of the discharge, be of metal and:

(a) Must be at least one pipe size larger than the normal outlet size of the safety device unless its total equipment hydraulic resistance exceeds that of a straight pipe 9m long, i.e. discharge pipes between 9m and 18m. Equivalent resistance length should be at least two sizes larger than the normal outlet size of the safety device, between 18m and 27m at least three sizes larger and so on. Bends must be taken into account in calculating the flow resistance. Refer to the diagram, tables and worked example detailed in Fig 6.

(b) Have a vertical section of pipe at least 300 mm long below the Tundish before any elbows or bends in the pipe work.

(c) Be installed with a continuous fall


(d) Have discharges visible at both Tundish and the final point of discharge, but where this is not possible or practically difficult, examples of acceptable discharge arrangements are:

- Ideally below a fixed grating and above the water seal in a trapped gully
- Downward discharge at low level, i.e. up to 100 mm above external surfaces such as car parks, hard standings, grassed areas, etc. are acceptable providing that where children play or otherwise come into contact with discharges, a wire cage or similar guard is positioned to prevent contact whilst maintaining visibility.
- Discharge at high level, e.g. into a metal hopper and metal down pipe with the end of the discharge pipe clearly visible (Tundish visible or not) or onto a roof capable of withstanding high temperature discharges of water and 3m from any plastic guttering system that would collect such discharges (Tundish visible).
- Where a single pipe serves a number of discharges such as in blocks of flats, the number served should be limited to not more than six systems so that any installation discharging can be traced reasonably easily. The single common discharge pipe should be at least one pipe size larger than the largest individual discharge pipe to be connected. If unvented hot water stored systems are installed where discharges from safety devices may not be apparent i.e. in dwellings occupied by blind, or disabled people, consideration should be given to the installation of an electrically operated device to warn when discharge takes place.

Warning Notice - The discharge will consist of scalding water and steam. Asphalt, roofing felt and non-metallic rainwater goods may be damaged by such discharges.

Typical discharge pipe arrangement.

Fig 6

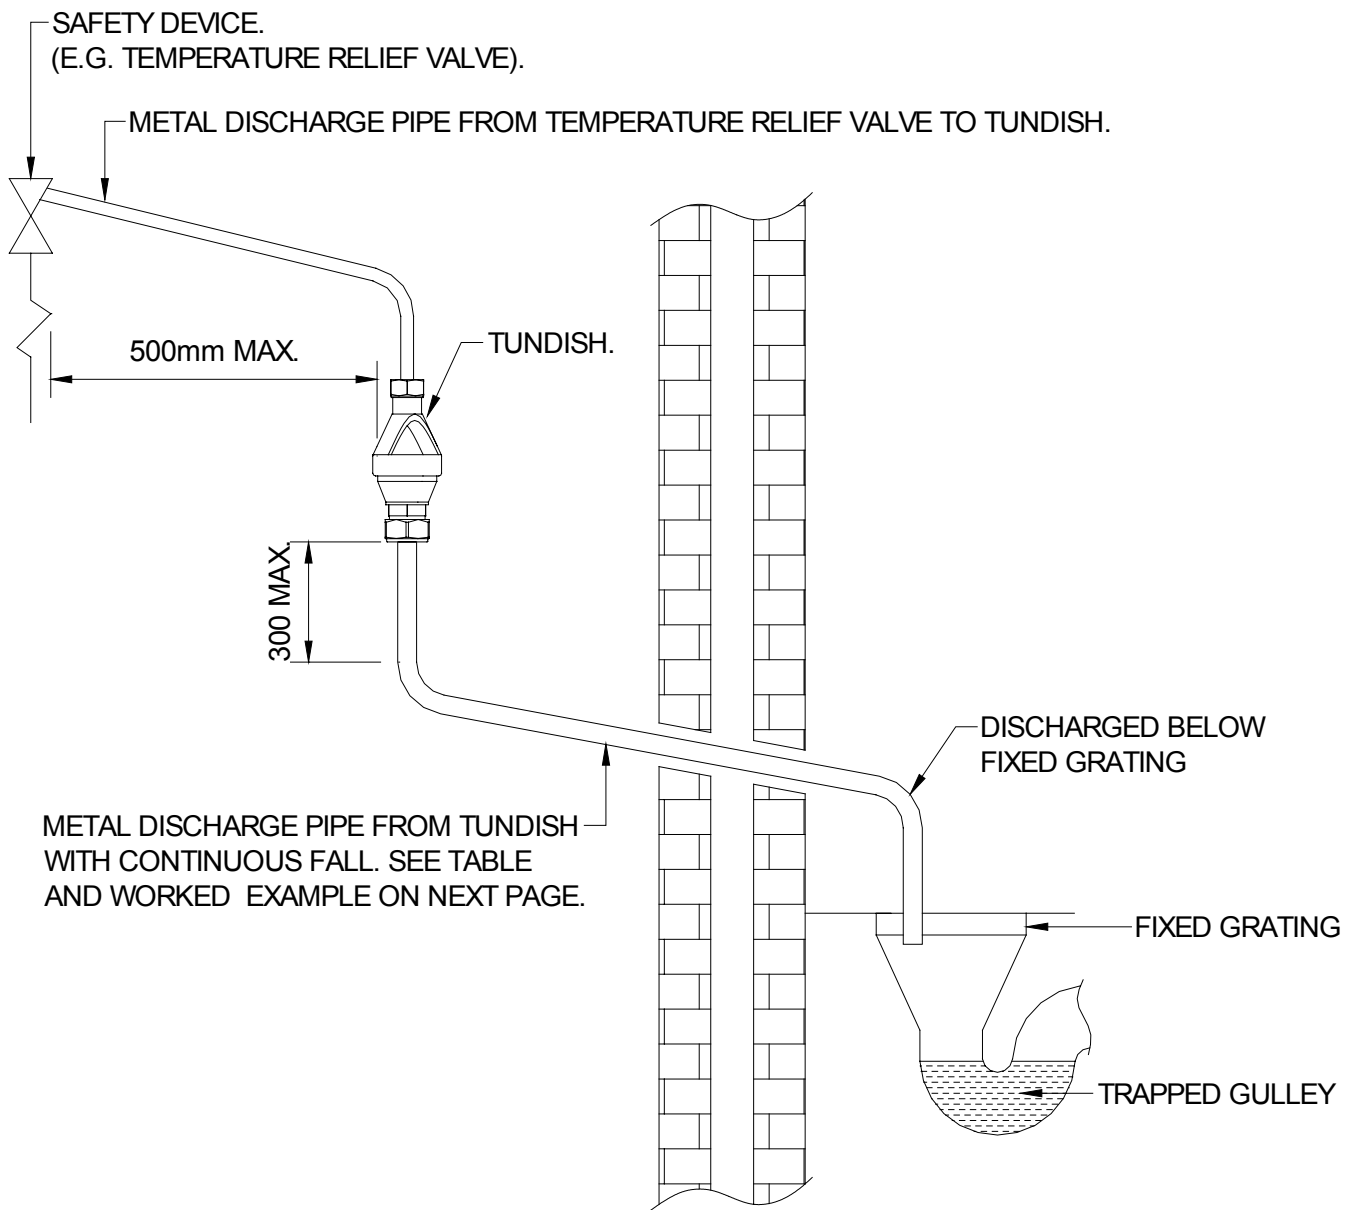

Sizing of copper discharge pipe “D2” for common temperature relief valve outlet sizes

Valve outlet size, diameter in ‘inches’	Min size of discharge pipe D1 in ‘mm’	Min size of discharge pipe D2 from tundish in ‘mm’	Max resistance allowed, expressed as a length of straight pipe, i.e. no elbows or bends.	Resistance created by each elbow or bend in ‘m’
1/2	15	22	Up to 9	0.8
		28	Up to 18	1.0
		35	Up to 27	1.4
3/4	22	28	Up to 9	-----
		35	Up to 18	-----
		42	Up to 27	1.7
1	28	35	Up to 9	1.4
		42	Up to 18	1.7
		54	Up to 27	2.3

Worked example

The example below is for a ½” diameter temperature relief valve with a discharge pipe (D2) having 4 No elbows and a length of 7 m from the tundish to the point of discharge.

From

Maximum resistance allowed for a straight length of Ø22mm copper discharge pipe (D2) from a ½” diameter temperature relief valve is - 9.0 m.

Subtract the resistance for quantity of 4 Ø22mm elbows at 0.8 m each = 3.2m.

Therefore, the maximum permitted length equates to 5.8m.

5.8m is less than the actual length of 7m, therefore, calculate the next largest size.

Maximum resistance allowed for a straight length of Ø28mm-pipe (D2) from a ½” diameter temperature relief valve equates to - 18m.

Subtract the resistance for a quantity of 4 Ø28mm elbows at 1.0 each = 4m.

Therefore the maximum permitted length equates to 14m.

As the actual length is 7m, a Ø28mm diameter copper pipe will be satisfactory.

8. Electrical installation

WARNING - THIS EQUIPMENT MUST BE EARTHED.

All electrical wiring must be carried out by a competent person and in accordance with the current **I.E.E. Wiring Regulations**. A suitable “Earthing” point is provided on the cylinder pedestal directly below the immersion heater (see Fig 1.1 and Fig 1.2).

The control equipment supplied will ensure that the cylinder functions safely. From an economic and convenience point of view, it is intended that these controls operate in conjunction with other control packages for example “S”, “W” or “Y” plan systems, which incorporate a programmable time clock etc.

8.1. The immersion heater - A 3kW 230v 50Hz-immersion heater is pre fitted to the cylinder at the factory. It should be wired in accordance with the instructions given in Fig 7. The cable **MUST** be routed through the strain relief bush. We recommend that the control thermostat is set at 60°C, the high limit trip is factory set at 85°C. The immersion heater conforms with EEC Directive 76/889 for radio interference and complies with BS 800:1977.

WARNING - Never fit an immersion heater without a thermal cut out.


8.2. The indirect temperature controller - The control and high limit thermostat for use with indirect systems is supplied separately with the unvented hot water safety kit. It should be fitted into the sensor pocket in the cylinder (see Fig 1 for position). The control thermostat has an adjustment range between 30°C and 90°C, however it is recommended this it be set to 60°C **WARNING:** The manual re-set high limit thermostat **MUST NOT** under any circumstances be bypassed. This is pre-set to 80°C and to prevent nuisance tripping the control thermostat should always be at least 15°C below this.

8.3. The 2 port valve - To prevent gravity circulation when the boiler switches off, the 2 port motorised valve supplied with the unvented hot water kit **MUST** be fitted in the primary flow pipe to the cylinder and wired in accordance with Figs 2, 3, 4.1 or 4.2 (depending on system design), to comply with current legislation.

Immersion heater installation and wiring instructions

- a) Ensure the main's voltage corresponds to the voltage rating of the immersion heater as shown on the rating label on the terminal cover.
- b) Install the immersion heater into the domestic hot water cylinder using the gasket provided. Use a shaped spanner, Stillsons or pipe grips should not be used. The use of sealing compound is not recommended.
- c) Wire the immersion heater in accordance with the wiring diagram below. It should be wired through a double pole isolator switch or controller, having contact separation of at least 3 mm, using 1.5mm sq. flexible cable, 85°C rubber insulated HOFR sheathed, to comply with BS 6141 table 8 and must be fully earthed.
- d) The BEAB approval certification on this immersion heater only applies if rod type thermostats, types Sunvic VKL or Cotherm SHD are used. The temperature setting of the control thermostat must not exceed 60°C.
- e) In the event of the manual reset cut-out operating, isolate the immersion heater from the mains supply, investigate and identify the cause of the operation of this cut-out, rectify the fault before manually resetting the cut-out via the reset button on the cut-out. Finally switch the mains electricity supply back on.

Fig 7

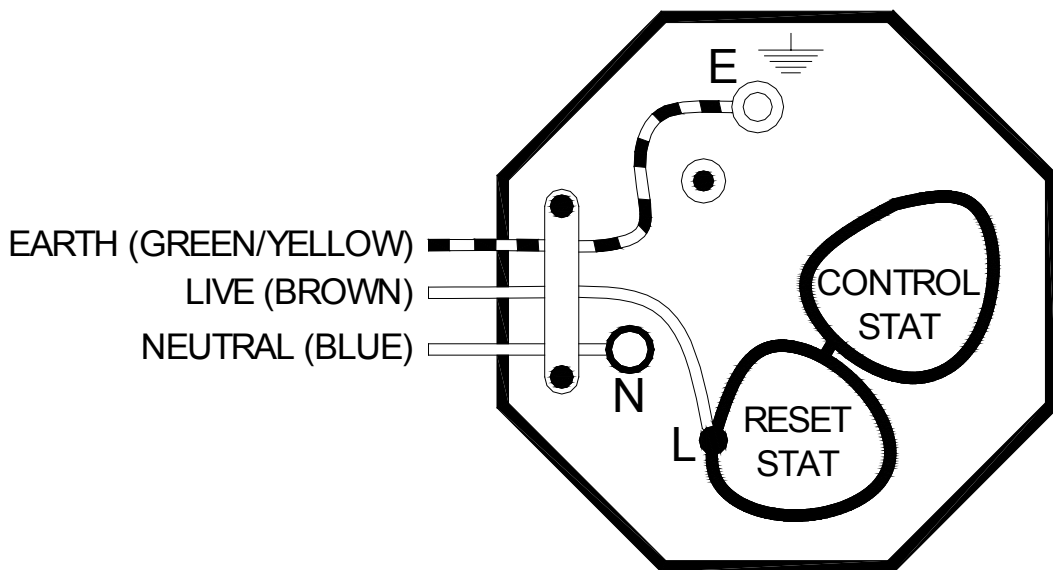

WARNING: THIS APPLIANCE MUST BE EARTHED.

9. Filling and commissioning-

9.1. Check that the expansion vessel charge pressure is 3 bar.

9.2. Check that all connections are made tight including the immersion heater.

9.3. Open the main stopcock and fill the secondary system first. Open successive taps (hot and cold) starting with the tap furthest from the cylinder. Leave each tap open for a few moments to allow all air and possibly debris from the system to exit. Manually lift (by rotating the knob) both the expansion relief (EV) and the temperature and pressure relief valve (TPV) for a short period to remove trapped air from behind the valve seating and to prove the correct function of the discharge arrangement.

9.4. Check all joints for leaks and rectify as necessary.

9.5. Check that the control and high limit settings for the indirect system and the immersion heater are as required.

9.6. Fill the primary side, (note: it will be necessary to manually open the 2 port valve whilst filling the system, this is achieved by moving the lever on the valve head sideways). Check for leaks and rectify as necessary. Vent all heat emitters of air and following the manufacturers lighting instructions ignite the boiler.

9.7. Check that while the cylinder is heating up, no water issues from either the expansion relief or the temperature and pressure relief valve and when the cylinder reaches temperature, that the 2 port valve closes.

10. Servicing and maintenance.

10.1. Servicing and maintenance must only be carried out by a competent unvented hot water installer, or by Ferroli Limited authorised personnel.

10.2. Before any work whatsoever is carried out on the installation, it **MUST** first be isolated from the main's electricity supply.

10.3. **WARNING:** both the primary and secondary systems will contain very hot water that will scald, therefore care should be taken when opening any joints, seals or valves.

10.4. Only use spare parts authorised by Ferroli Limited. The use of unscheduled spare parts will invalidate the warranty.

10.5. Drain the cylinder - When draining the cylinder, always switch off the boiler and the immersion heater first. Turn off the water supply at the stopcock (see Fig 5). Connect a hose pipe to the drain cock (see Fig 5) and route it to a convenient gully. Open the drain cock and all hot taps that are served by the cylinder. The cylinder may take several minutes to empty completely.

10.6. In hard water areas it may be necessary from time to time to remove and de-scale the immersion heater element. Replace the gasket each time it is removed.

10.7. Remove the cartridge from the pressure-reducing valve (PRV). Check the strainer and if necessary remove any debris from in front of it. Replace the cartridge.

10.8. Check the charge pressure in the expansion vessel and top up as necessary. The charge pressure should be **3.0 bar**.

10.9. Whilst the hose pipe is connected, the drain cock open and with the immersion heater removed, the cylinder may be flushed out to remove any debris, sand or lime scale particles that may have collected in the bottom by using a further hose pipe connected to the cold water main.

10.10. Close the drain cock, disconnect the hose, refit the immersion heater and close all hot water taps before reopening the stopcock. Allow the cylinder time to fill whilst checking for any leaks. Release any air from the system by opening each hot water tap individually, starting with the one furthest from the cylinder.

10.11. Manually lift the expansion relief and temperature and pressure relief valve one at a time, every 12 months (more frequently in hard water areas) to prevent debris from building up behind the valve seat. Whilst carrying out this operation, check that the discharge to waste is unobstructed. Check that each valve seals correctly when released. As the valves are pre-calibrated, they require no further maintenance.

10.12. Finally switch on the mains electricity supply to the immersion heater and the boiler. As the system heats up, check again for any leaks and rectify as necessary.

11. Fault finding.

Notice: Disconnect electrical supply before removing any electrical equipment cover.

<u>Fault</u>	<u>Possible cause</u>	<u>Remedy</u>
No hot water	<ol style="list-style-type: none">1. Mains supply off2. Strainer blocked3. Pressure reducing valve (PRV) incorrectly fitted	<ol style="list-style-type: none">1. Open stopcock2. Turn water supply off, remove strainer and clean. (see 10.6)3. Re-fit correctly
Water from hot taps is cold	<ol style="list-style-type: none">1. Programmer set to heating only or not switched on2. Central heating boiler malfunction3. High limit thermostat has tripped4. Motorised valve malfunction	<ol style="list-style-type: none">1. Set programmer to call for hot water2. Check boiler operation if faulty consult your boiler manufacturers instructions3. Check and re-set4. Check wiring and/or plumbing connections to motorised valve
Intermittent water discharge	<ol style="list-style-type: none">1. Expansion vessel has lost its charge pressure	<ol style="list-style-type: none">1. Turn off stopcock open a hot water tap check vessel charge pressure and recharge to 3 bar
Continuous water discharge	<ol style="list-style-type: none">1. Pressure reducing valve (PRV) working2. Expansion relief valve not seating correctly3. Temperature and pressure relief valve not seating correctly	<ol style="list-style-type: none">1. Check pressure from PRV if greater than 3 bar replace cartridge2. Manually lift the valve once or twice to clear any debris from the seat otherwise replace valve3. Same remedy as above

12. Users instructions.

12.1 Your “Ferroli AquaCyl” unvented hot water cylinder has been designed to give many years of trouble-free service and is made from hygienic high grade stainless steel. It includes a 3 kW electric immersion heater for times when your central heating is switched off, during the summer for instance.

12.2. The flow temperature of the hot water can be set to your requirements on the immersion heater up to 60°C and the indirect side thermostat up to 65°C. These temperatures should not be set any higher otherwise nuisance tripping of the high limit thermostat will occur. If you are in any doubt, these adjustments should be best left to a qualified electrician

12.3. When a hot tap is turned on there may be a short surge of water, this is quite normal with unvented systems and does not mean there is a fault.

12.4. When you first fill a basin the water may sometimes appear milky. This is due to very tiny air bubbles in the water, which will clear very quickly.

12.5. **WARNING:** If water issues from the temperature and pressure relief valve (TPV) or from the expansion relief valve (EV) seek expert advice immediately.

13. Warranty

13.1. Ferroli Limited guarantee all electrical and mechanical controls supplied with the cylinder for a period of 2 years from the date of purchase provided that they have been installed for their intended use by a competent person and have not been modified in any way.

13.2. The material used in the manufacture of the cylinder and sockets is guaranteed for a period of 25 years.

The labour and manufacturing processes are guaranteed for a period of 2 years from date of installation.

provided that:

- (a) It has been installed by a competent person in accordance with this installation manual and all current regulations and codes of practice at the time of installation.
- (b) It has been used solely for the purpose of heating potable water that complies with current (at the time of installation) EU standards and is not fed with water from a private source.
- (c) It has not been modified in any way.
- (d) It has not been subjected to excessive pressure or electrolytic action from dissimilar materials, or attack from any salt deposits.
- (e) It has been installed indoors in a frost-free environment.
- (f) The warranty card is completed and returned to Ferroli Limited within 90 days of installation.
- (g) The stainless steel hot water cylinder has been serviced every 12 months from the date of installation by a competent person and the service record details recorded.

This warranty is not transferable. This warranty does not include claims due to frost or lime scale damage. Proof of purchase will be required against any claim. This guarantee does not affect your statutory rights.

For help about the Ferroli AquaCyl and the Ferroli AquaCyl Twin Coil please contact:

**Ferroli Limited, Lichfield Road, Branston Industrial Estate,
Burton-Upon-Trent, Staffordshire, DE14 3HD
Tel. 08707 282 882, Fax. 08707 282 885,
www.ferroli.co.uk**

14. Installation, Commissioning and Service Record

CUSTOMER DETAILS			
NAME			
ADDRESS			
	TEL No.		

INSTALLER DETAILS			
COMPANY NAME		DATE	
ADDRESS			
	TEL No.		
INSTALLER NAME		REGISTRATION No.	

COMMISSIONING ENGINEER (IF DIFFERENT)			
COMPANY NAME		DATE	
ADDRESS			
	TEL No.		
INSTALLER NAME		REGISTRATION No.	

CYLINDER DETAILS		
MODEL		
CAPACITY	LITRES	SERIAL NO.

SERVICE RECORD DETAILS
<p>Before completing the appropriate Service Interval Record below, please ensure you have carried out the service as described in the manufacturer's instructions and in compliance with all relevant codes of practice.</p> <p>It is recommended that your hot water system is serviced regularly and that your service engineer completes the appropriate Service Interval Record below.</p>

SERVICE 1 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 2 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 3 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 4 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 5 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 6 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 7 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 8 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 9 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE

SERVICE 10 DATE:
ENGINEER/COMPANY
TEL NO.
COMMENTS
SIGNATURE